

Pay with your bankcard in 4 easy steps

These laundry machines accept credit/debit card payment at the machine with



CleanReader Ultra

1

Add clothes to the machine.

2

Choose the appropriate cycle selection.

3

Swipe your credit or debit card.

Your card will be pre-authorized for a small balance. Your bank should release the hold on any unused balance within 48 business hours.

4

Press the Start Button.

Note: To add time to the dry cycle, swipe your card again after pressing Start.