

Laundry Kiosk Usage Instructions

The laundry machines at this property use a contactless laundry card system.

This kiosk will dispense a laundry card. Value can be added to the card with your credit/debit card, cash, or a Value Code.

1

Buy a Laundry Card:

- Press **F3** on the terminal
- Follow instructions on the screen to purchase with Cash, Bankcard or Value Code

2

Add value to Laundry Card:

- Place your Laundry Card in the **CARD HOLDER** (the card balance will appear)
- Follow instructions on the screen to use your desired payment option
- Select amount of value you want to load on the Laundry Card
- Follow the instructions on the screen and remove card when prompted

