

# HOW TO USE LAUNDRY CARD



- 1 Put laundry in the machine
- 2 Make the appropriate cycle selection
- 3 Place laundry card on the card holder
- 4 Balance will display; START button will activate
- 5 Press START to start the cycle

## Reminders:

- If card is removed without pressing START, machine will go idle.



Coin-O-Matic

3900 W 127th Street Alsip, IL 60803 708-371-9595 www.coinomatic.com